



How to Install a Module

1. Insert the module until it stops.

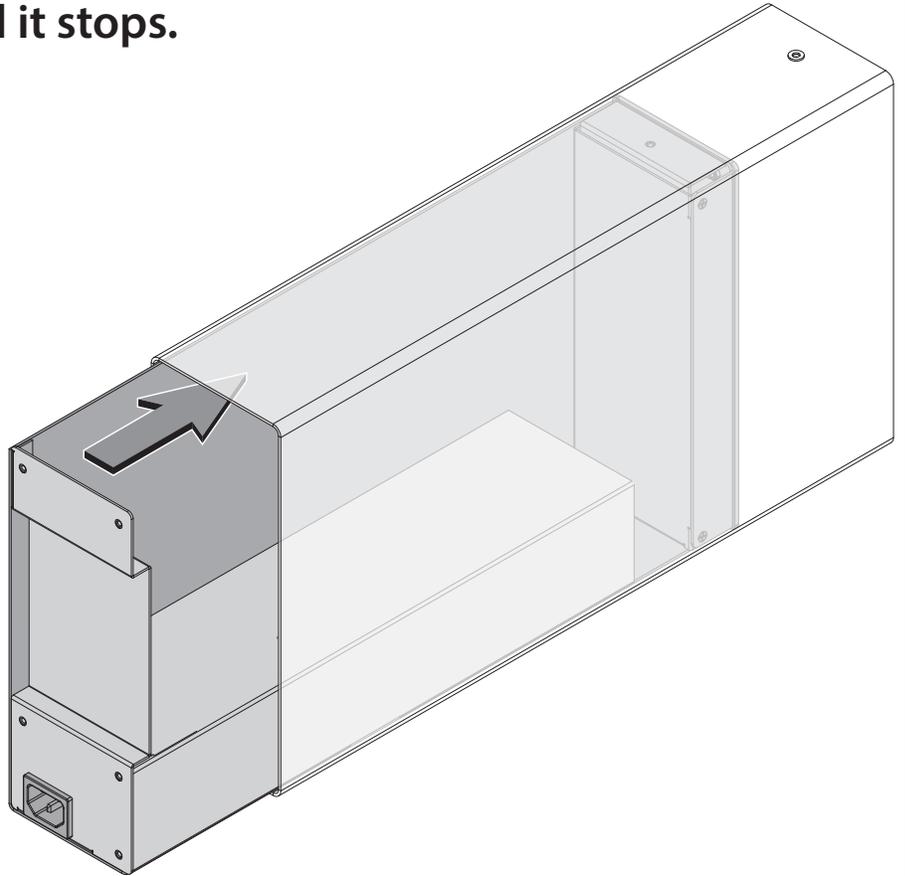


2. Secure the module.

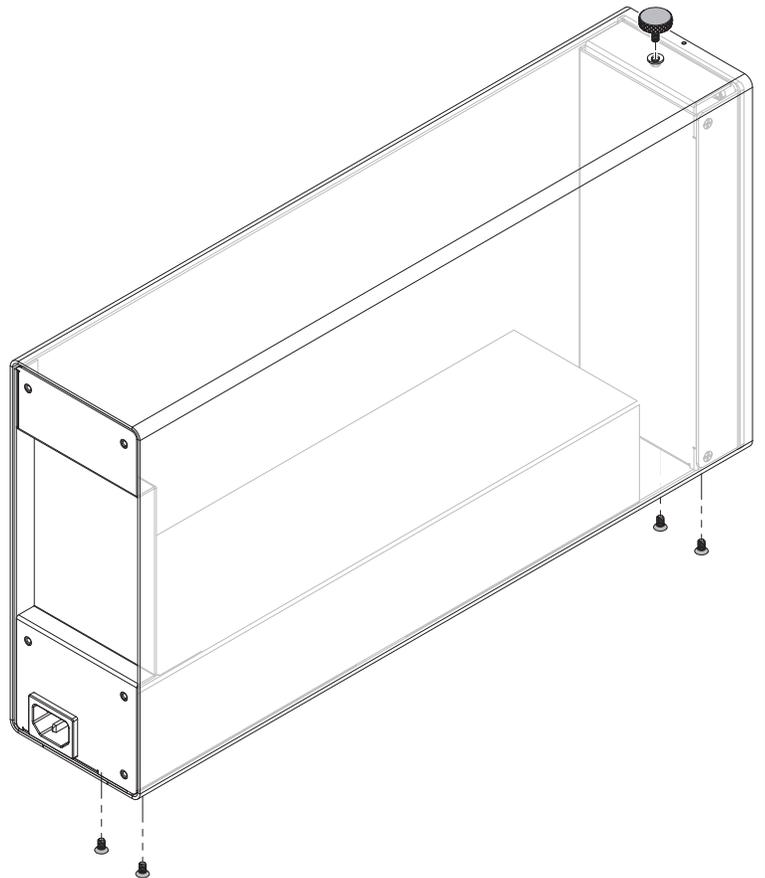

How to Remove a Module

1. Remove the screws.

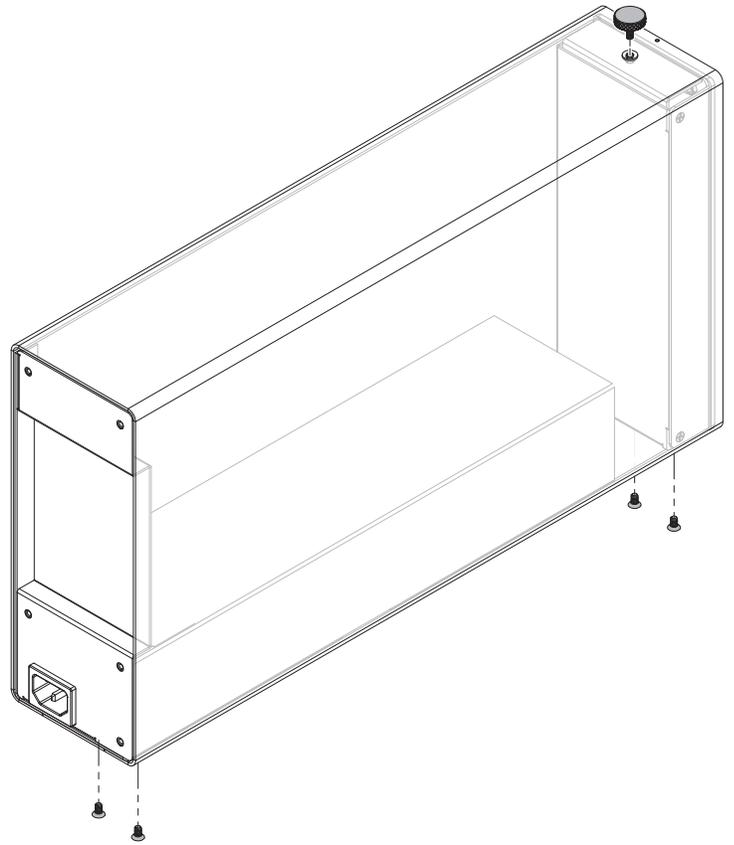

2. Pull out the module.

