



STEPS FOR UPGRADING TO USB 3 PANEL-MOUNT CABLES IN xMAC MINI SERVER

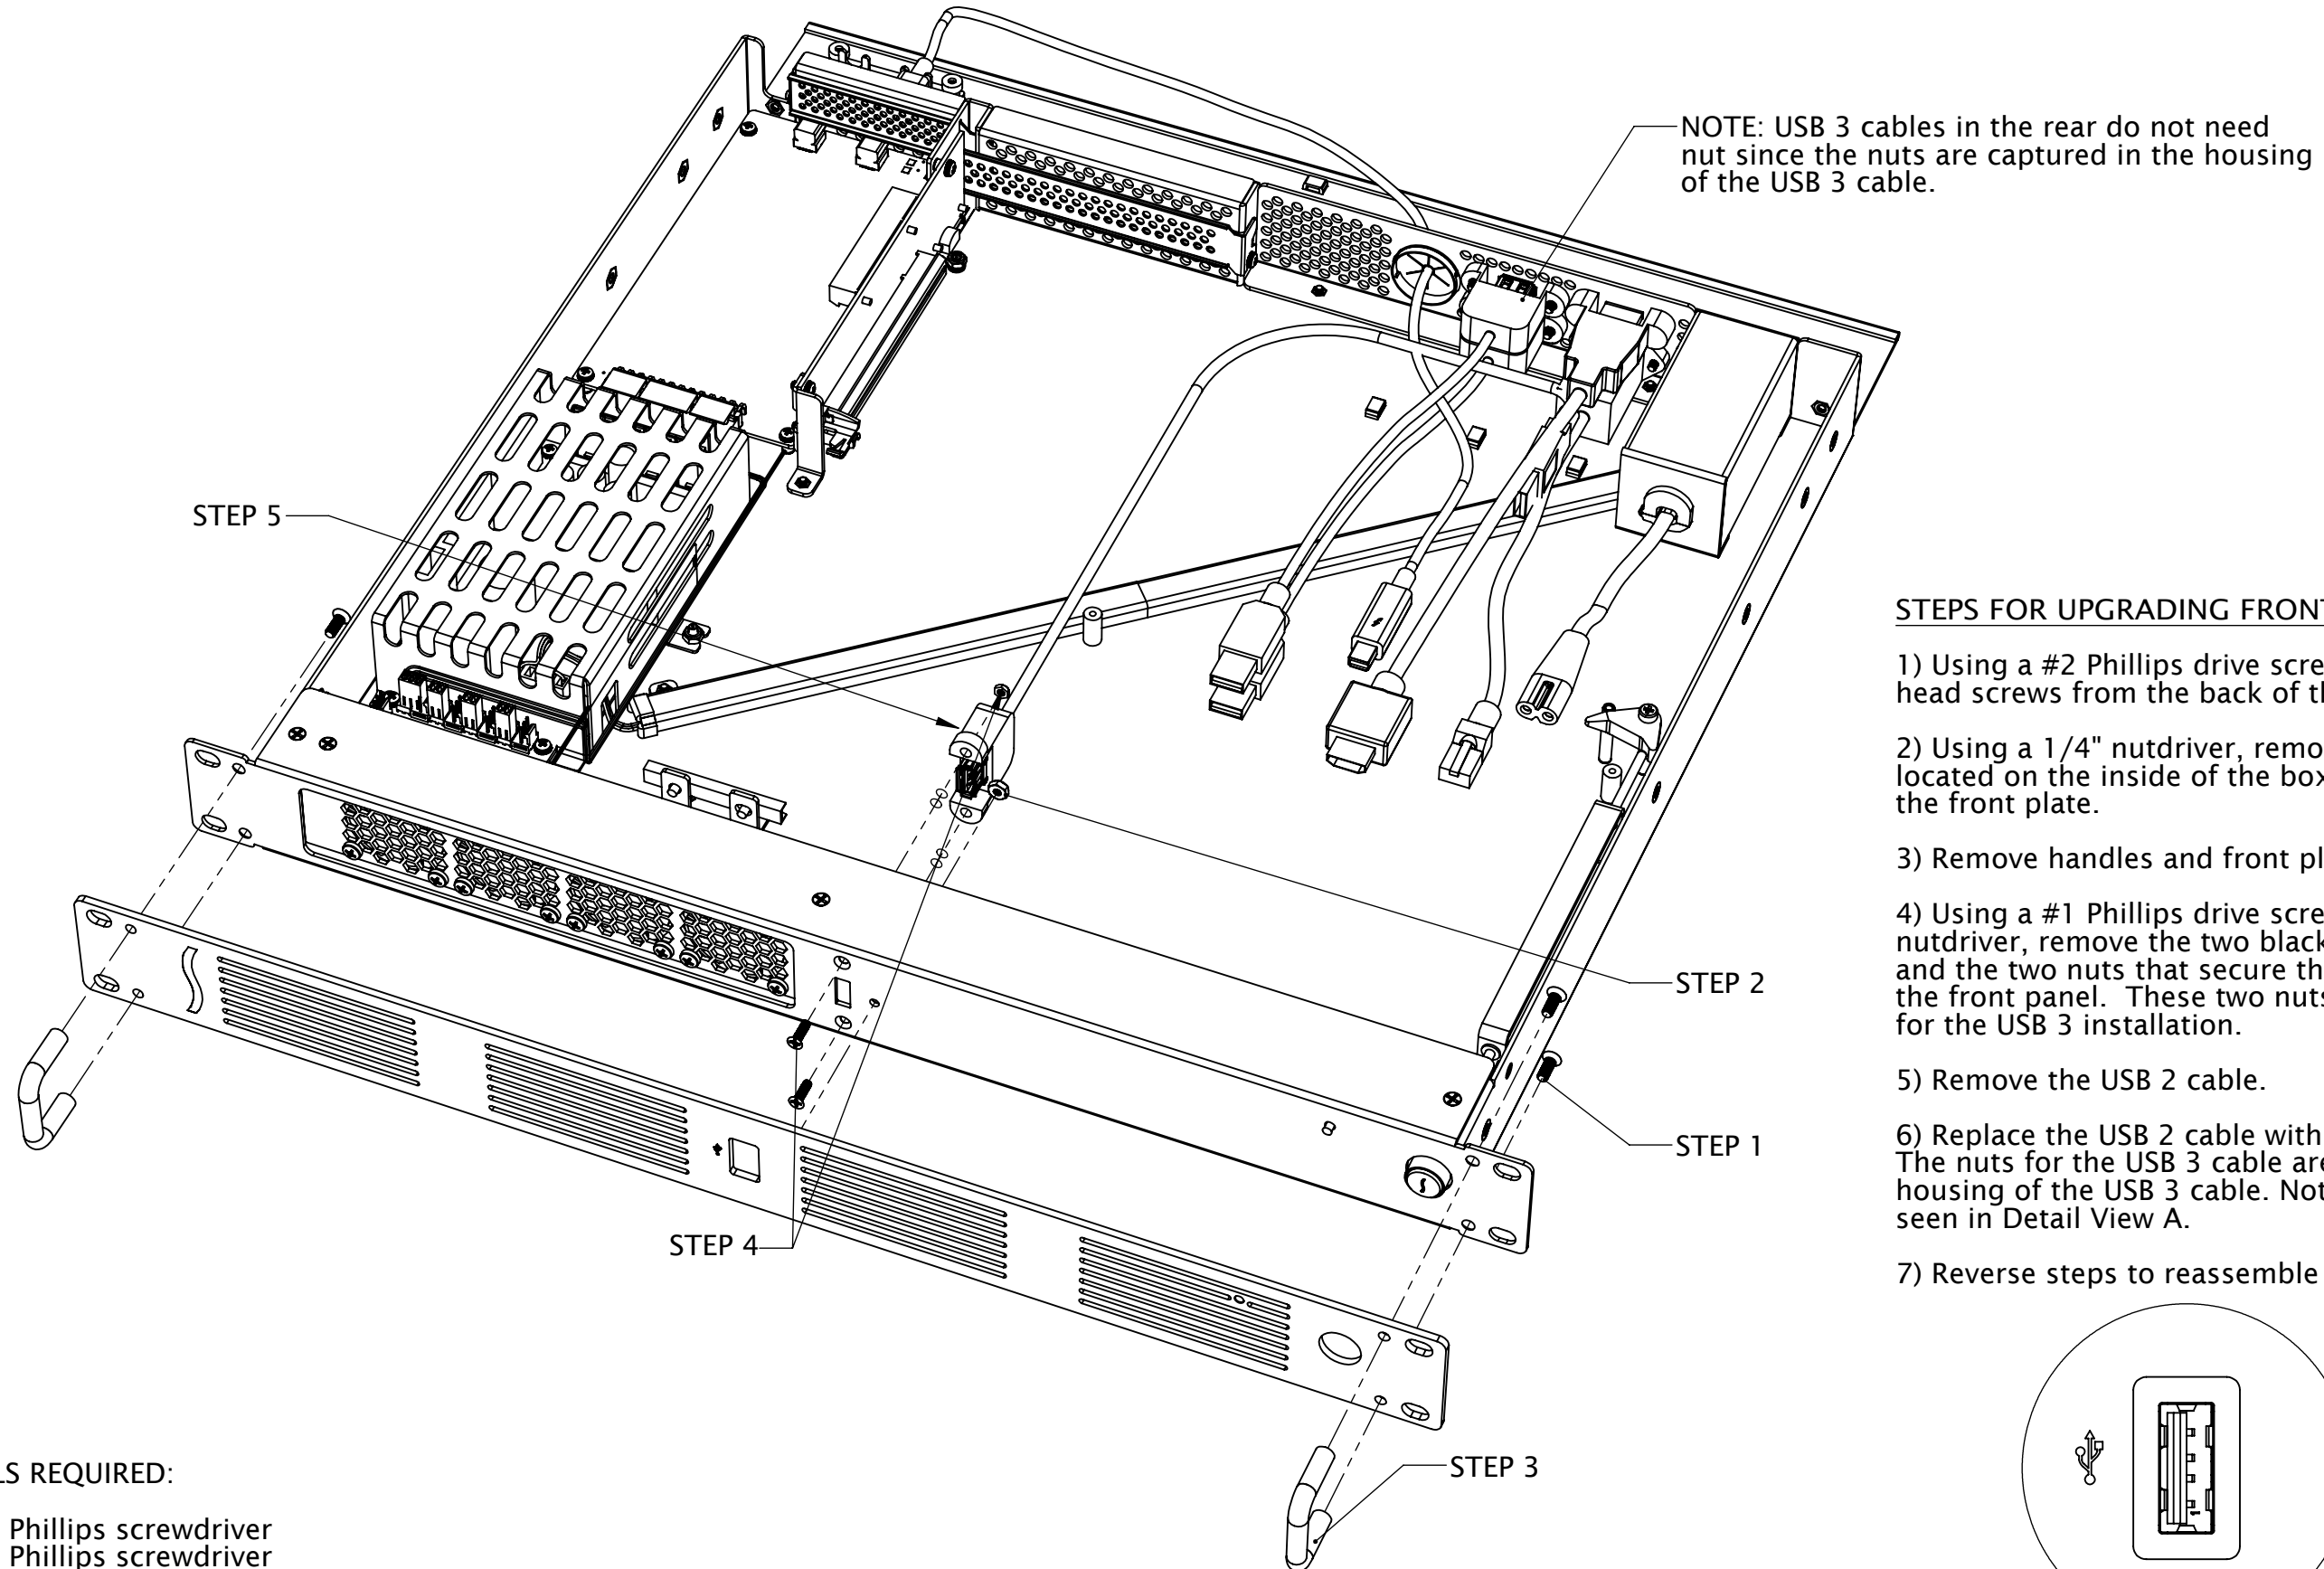

NOTE: USB 3 cables in the rear do not need nut since the nuts are captured in the housing of the USB 3 cable.

STEPS FOR UPGRADING FRONT USB 3 CABLES

- 1) Using a #2 Phillips drive screwdriver, remove 4 flat head screws from the back of the front panel.
- 2) Using a 1/4" nutdriver, remove the nut located on the inside of the box that secures the front plate.
- 3) Remove handles and front plate and set aside.
- 4) Using a #1 Phillips drive screwdriver and a 7/32" nutdriver, remove the two black flat head screws and the two nuts that secure the USB 2 cable to the front panel. These two nuts will not be needed for the USB 3 installation.
- 5) Remove the USB 2 cable.
- 6) Replace the USB 2 cable with the USB 3 cable. The nuts for the USB 3 cable are captured in the housing of the USB 3 cable. Note orientation as seen in Detail View A.
- 7) Reverse steps to reassemble unit.

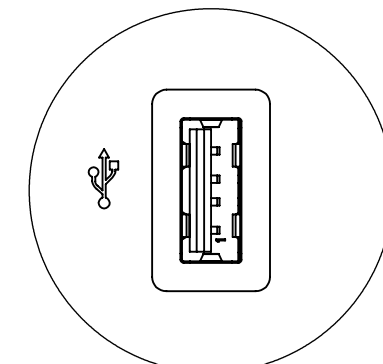

DETAIL A
SCALE 3 : 2

TOOLS REQUIRED:

- 1) #1 Phillips screwdriver
- 2) #2 Phillips screwdriver
- 3) 7/32" nutdriver
- 4) 1/4" nutdriver