

User's Guide


for Echo III Module

Thunderbolt to PCIe Card Expansion System



Support Note: This document was up to date at the time of printing. However, changes to the hardware or software may have occurred since then. Please check the Sonnet website for the latest documentation.

1. Go to <https://www.sonnettech.com/support/kb/kb.php>
2. Navigate to and click the Echo III Module link.
3. Click the Manual link.
4. Click the Echo III Module User's Guide [English] link and then check the Document Version information. If the version listed on the last page of this manual is later than this document (**revision H**), click the Download Now button for the latest version.

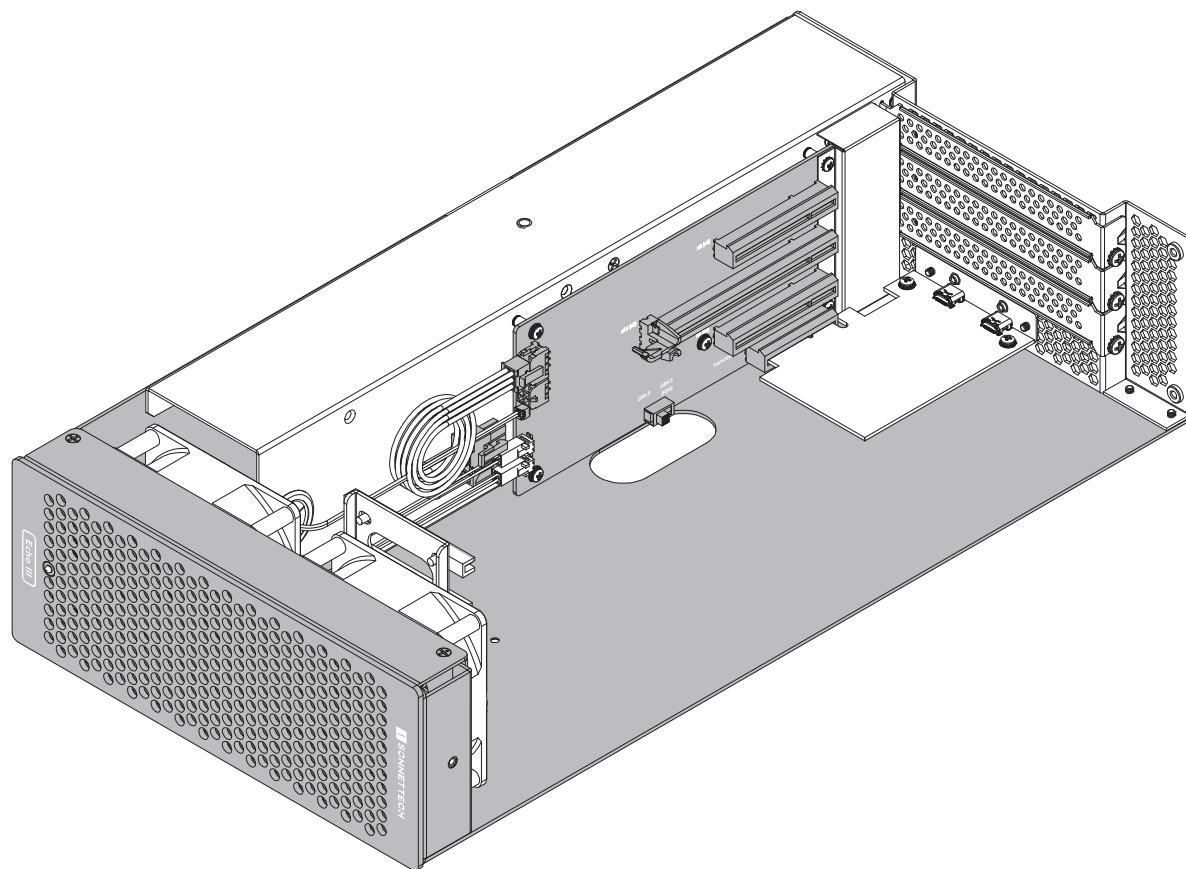

For
Windows



Contents

1	Introduction and System Requirements	1
	Introduction	
	Mac Compatibility	
	Windows Compatibility	
	Linux Compatibility	
	System Requirements	
	Preparing to Use Echo III Module With a Mac Computer	
	Preparing to Use Echo III Module With a Windows Computer	
	Preparing to Use Echo III Module With a Linux Computer	
2	Echo III Module Description	2
	Front Panel	
	Back Panel	
	Interior	
	Thunderbolt Cable	
	Thunderbolt Connector Retainer Clip	
3	PCIe Card Installation and System Setup Steps	5
4	Complete Setup and Configuration	8
	Setup and Configuration Steps—Mac Users	
	Setup and Configuration Steps—Windows Users	
5	Tips, General Information, and Known Issues	9
	Tips, General Information	
	Known Issues	
6	Precautions, FCC Compliance, and Support Information	10
	Safety Precautions	
	FCC Compliance	
	Contacting Customer Service	

Chapter 1 – Introduction and System Requirements

Introduction

Congratulations on your purchase! Echo™ III Module is a Thunderbolt expansion system for PCIe cards. Through its PCIe slots, you may connect three non-GPU adapter cards to a computer with Thunderbolt ports to expand its capabilities and add connectivity beyond what's offered through its native ports.

Mac Compatibility

- Mac (M series)
- Mac (Intel) with Thunderbolt 3 ports
- macOS 13+

Windows Compatibility

- Windows computer with Thunderbolt 5 or 4 ports
- Windows 11 22H2 build 22621.819 and newer

Linux Compatibility

- Linux computers with Thunderbolt 5 or 4 ports
- Linux Kernel 6.1, 6.12

System Requirements

While Echo expansion systems require no drivers beyond those pre-installed in your computer's OS, most expansion cards you install do; Thunderbolt-compatible drivers to enable them to work properly through the Thunderbolt interface are required. More information on which cards are compatible with Echo III module is available at: <https://sonnettech.com/support/>

Preparing to Use Echo III Module With a Mac Computer

The drivers required to support Echo III Module are installed as part of macOS; there are no preparation steps beyond updating your computer to macOS 13 or newer.


Preparing to Use Echo III Module With a Windows Computer

The drivers required to support Echo III Module are installed as part of Windows 11 22H2 build 22621.819 and newer; there are no preparation steps beyond updating your computer to that version or a later one.

Preparing to Use Echo III Module With a Linux Computer

The drivers required to support the Echo III module are installed as part of Linux Kernel 6.1 and 6.12; there are no preparation steps beyond updating your computer to a compatible Linux Kernel if necessary.


Chapter 2 – Echo III Module Description

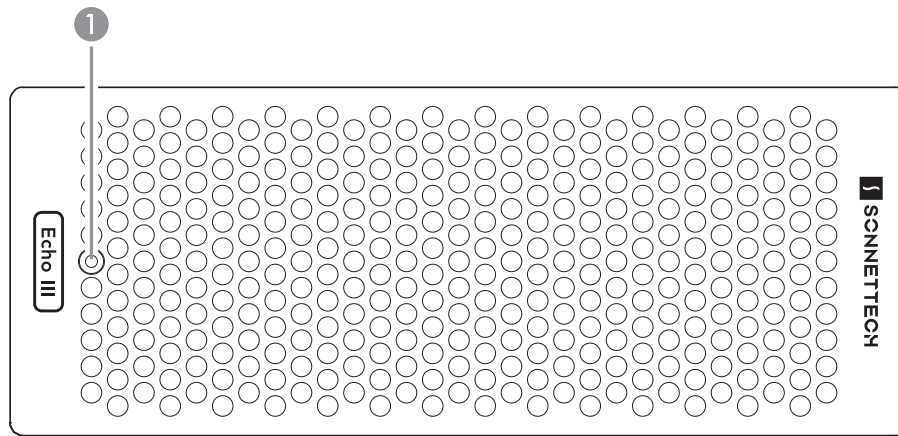

Front Panel

1 – Power Indicator LED

This lights when Echo III Module is powered, the Thunderbolt cable between the module and your computer is plugged in securely, and the computer powered on. Note that if the Echo Module is connected to another Thunderbolt device instead of directly to the computer, any other Thunderbolt device connected between the computer and module must also be powered on before the module's power indicator will light up.

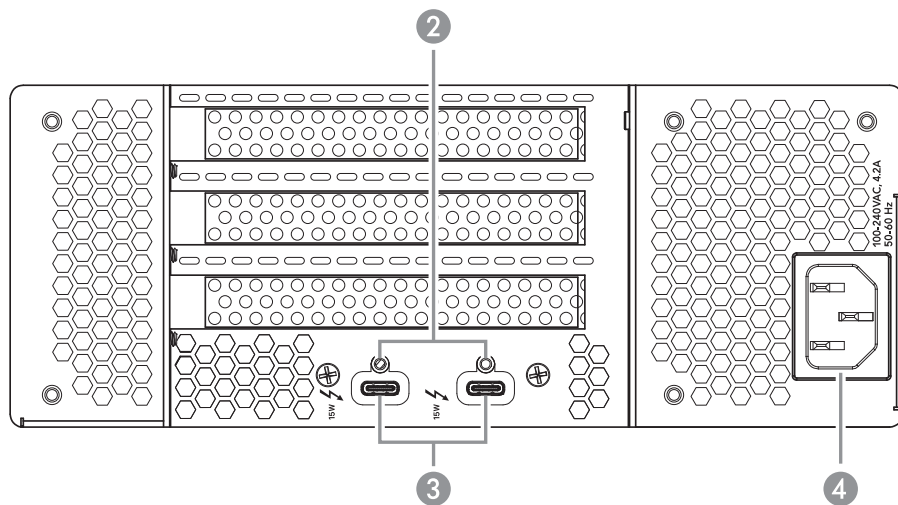

Back Panel

2 – Threaded Nuts for ThunderLok

Attach the included Thunderbolt connector retainer clip here.

3 – Thunderbolt Ports

Connect the included (or other certified) Thunderbolt cable between either of these ports and your computer's Thunderbolt port (or other Thunderbolt device in the chain connected to the computer).

The second port may be used to connect to another Thunderbolt peripheral device, display(s), or a USB device (when connected with the proper cable or adapter).

4 – Power Input Socket

Connect the included AC power cable here.

Chapter 2 – Echo III Module Description

Interior

1 – Slot 1

This is an x8 mechanical (x8 electrical) PCIe 3.1 slot.* It is also compatible with PCIe 4.0, 2.0, and 1.1 cards.

2 – Slot 2

This is an x16 mechanical (x8 electrical) PCIe 3.1 slot.* It is also compatible with PCIe 4.0, 2.0, and 1.1 cards.

3 – Slot 3

This is an x8 mechanical (x4 electrical) PCIe 3.1 slot.* It is also compatible with PCIe 4.0, 2.0, and 1.1 cards.

4 – PCIe Gen 3/Gen 2 (HDX) Mode Switch

This switch enables the use of Avid Pro Tools | HDX PCIe cards in the Echo module; instructions follow.

5 – Thunderbolt Interface Card

This card is installed in its own slot and may not be moved to another.

6 – PCIe Slot Access Covers

These cover openings when PCIe slots are unoccupied.

7 – 6-Pin Auxilliary Power Connector and Cable


Plugged into this connector is the auxiliary power cable for cards requiring extra power. When installing Avid Pro Tools | HDX PCIe cards, disconnect the supplied cable and connect an HDX card's custom power cable in its place.

8 – Temperature-Controlled Fans

These provide cooling for the installed PCIe cards and the module's supporting Thunderbolt and power circuitry. They operate at a whisper when the cards are running cool, and automatically speed up in steps as the temperature rises. To prevent overheating, do not block the fans or the vent holes on the module.

9 – PCIe Card Guides

When installing full-length cards, use these to support and secure the cards.

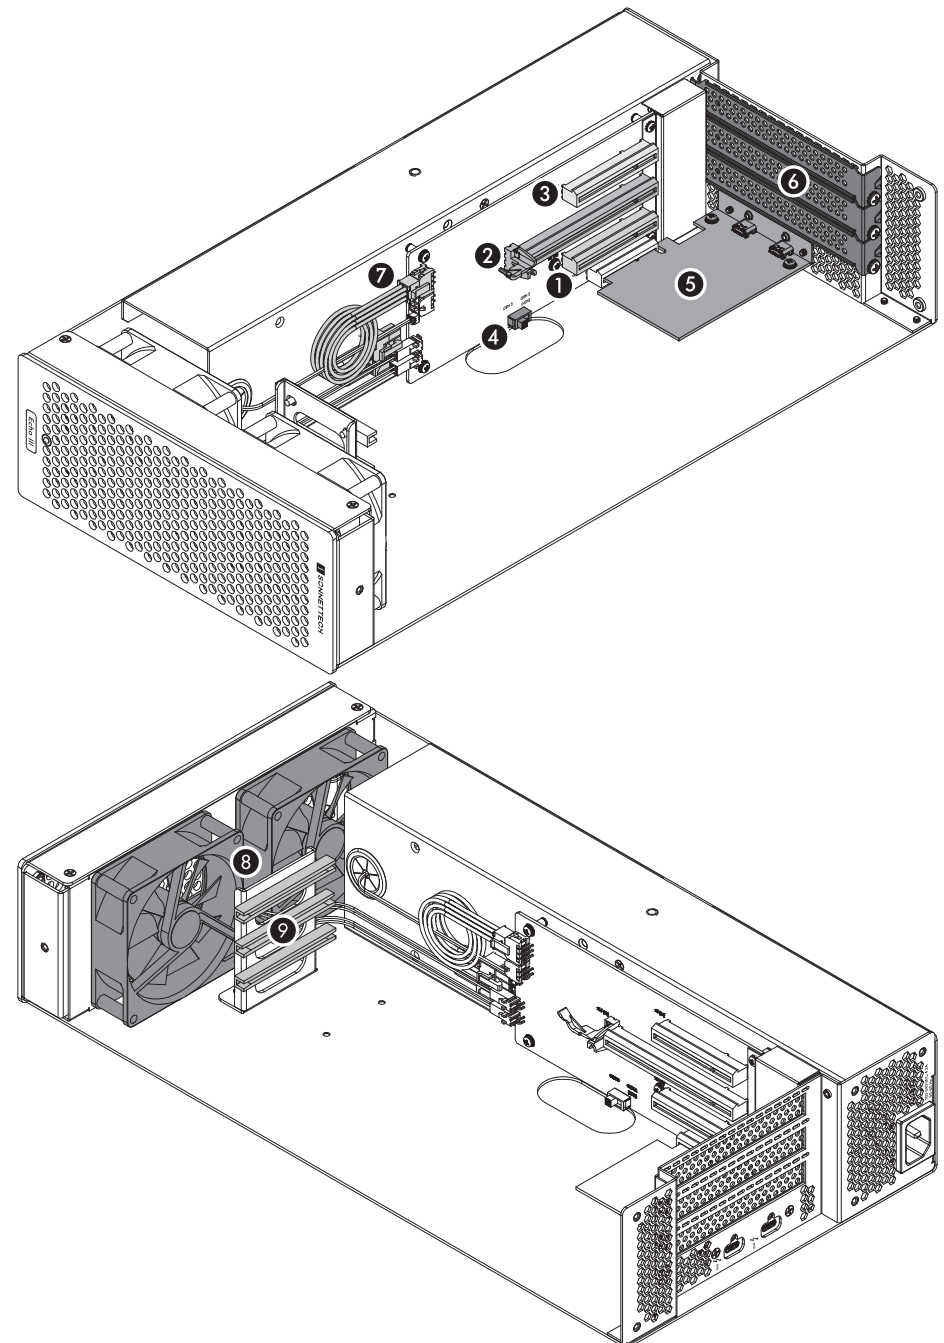


* PCIe 2.0 slot when PCIe Gen 3/Gen 2 (HDX) Mode Switch set to Gen 2 (HDX) position.

Chapter 2 – Echo III Module Description


Thunderbolt Cable

Connect this cable between the Echo module and your computer (or other Thunderbolt device in the chain connected to the computer). Connecting the Echo module to a computer port marked with a generic USB icon (•↔) or USB + Charging Port icon (⚡) is NOT supported.

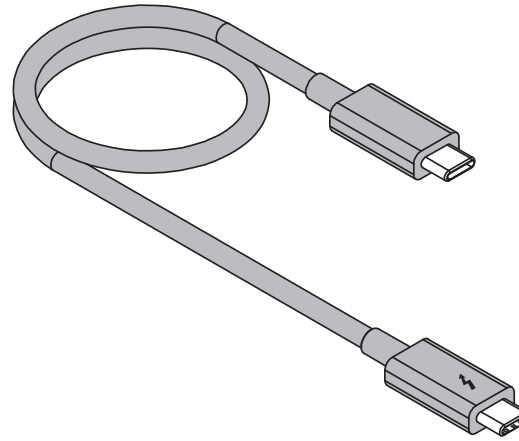

Thunderbolt Connector Retainer Clip

This clip secures the Thunderbolt connector plugged into one of the Echo module's Thunderbolt ports to prevent accidental cable disconnection. This clip is compatible with Sonnet Thunderbolt cables.

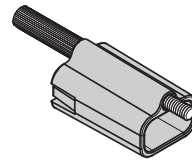

Chapter 3 – PCIe Card Installation and System Setup Steps

1. Remove Echo III Module from its packaging, and then set it on a flat, level surface.

Support Note: To avoid damaging components due to static electricity discharge, wear an antistatic wrist strap while working inside the Echo module.

2. Remove and set aside the screw securing a PCIe slot access cover (Figure 1).
3. Remove and set aside the loose PCIe slot access cover (Figure 1).
4. If you are installing more than one card, repeat steps 2 and 3 as necessary with the remaining PCIe slot covers.

WARNING: When handling computer products, take care to prevent components from being damaged by static electricity; avoid working in carpeted areas. Handle expansion cards only by their edges and avoid touching connector traces and component pins. Also, avoid touching the Echo module's circuit boards and any of its components.

5. **OPTIONAL STEP 1:** If you are *not* installing a PCIe card which requires auxiliary power, go to step 7. Otherwise, locate the auxiliary power cable connected to the indicated 6-pin connector (Figure 2).
 - When installing one or more Pro Tools | HDX PCIe cards, disconnect and set aside the power cable, replace it with the custom power cable included with an Avid card, and then move the loose connectors aside for later connection.
 - When installing cards other than the Pro Tools | HDX, remove the cable twist tie securing the power cable, and then move the loose connector aside for later connection.
6. **OPTIONAL STEP 2:** If you are installing one or more Avid Pro Tools | HDX cards, move the Gen 3/Gen 2 (HDX) switch (Figure 2) to the Gen 2 (HDX) position to enable compatibility. Otherwise, the card(s) will not work in the Echo module.

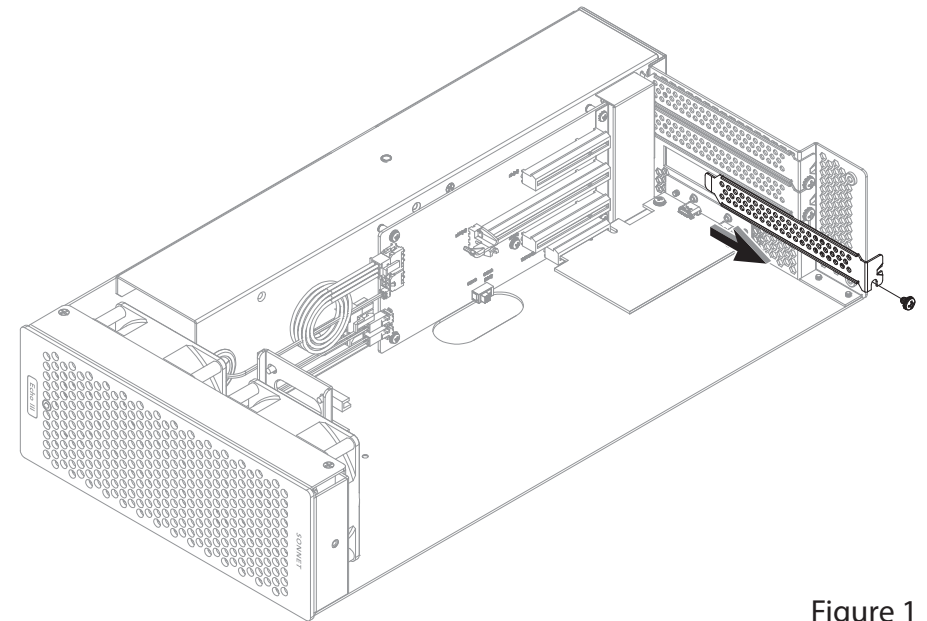


Figure 1

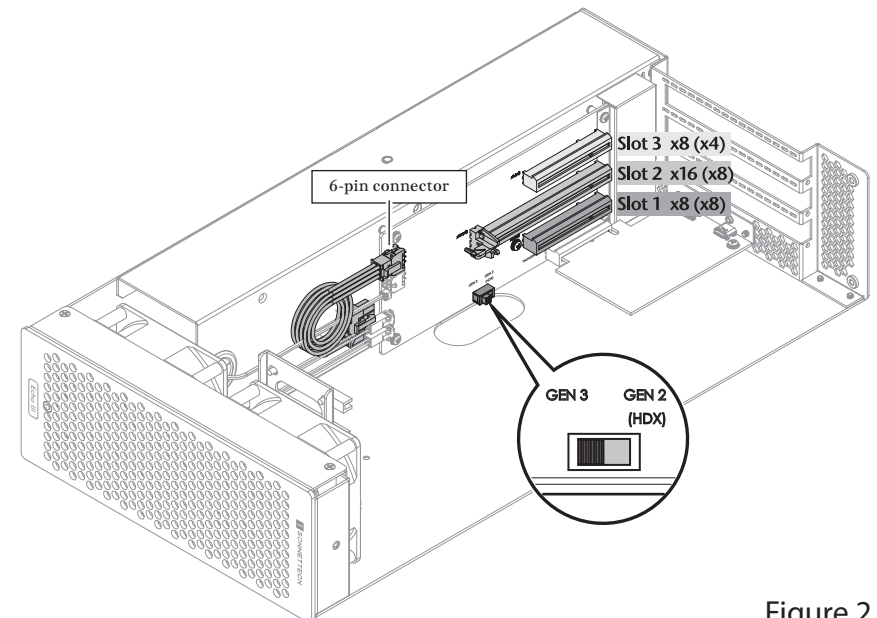


Figure 2

Chapter 3 – PCIe Card Installation and Module Setup Steps

7. Remove a PCIe card from its packaging, handling the card by its edges and without touching any components or gold connector pins.



Support Note: If you are installing an x8 PCIe 1.1 card like the original RED ROCKET (not RED ROCKET-X) or certain 10 Gigabit Ethernet cards, installing it into slot 3 may result in reduced performance. We recommend you install it into either slot 1 or 2 for best performance.

8. Line up the card's connector with the slot, and then gently but firmly press the card straight into the slot; **do not rock the card or force the card into the slot**. If you encounter excessive resistance, check the card's connector and the slot for damage, and then try inserting the card again (**Figure 3**).
9. Repeat steps 7 and 8 as necessary with any remaining cards.
10. If you installed a card which requires auxiliary power, connect the auxiliary power connector to it now.
11. If there are any unoccupied slots, install the PCIe slot access covers you removed previously, and then secure the cards and slot covers using the previously-removed screws (**Figure 3**).
12. Following the instructions included with the Sonnet enclosure you purchased, install Echo III Module into the enclosure now, and then go to the next page.

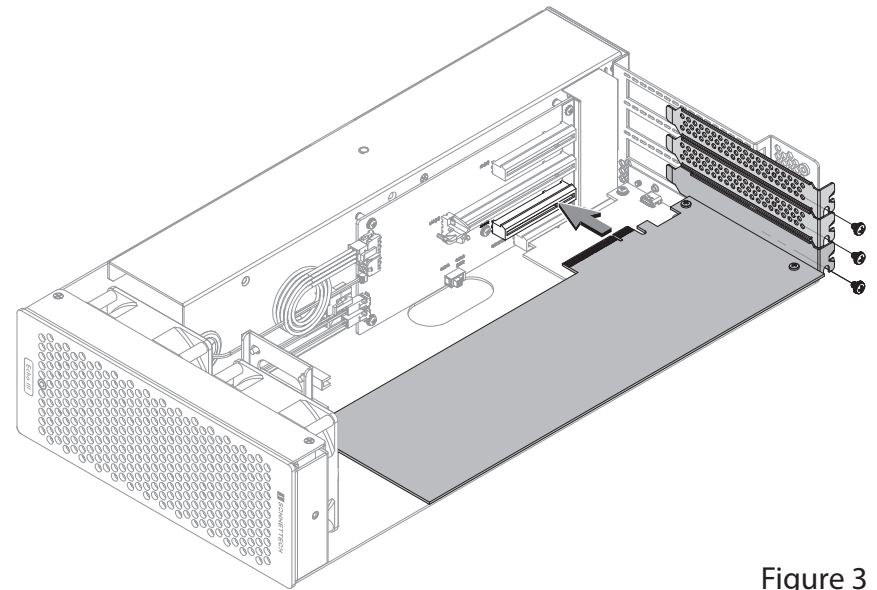


Figure 3

Chapter 3 – PCIe Card Installation and Module Setup Steps



Support Note: Sonnet's ThunderLok™ Thunderbolt connector retainer clip secures the included Thunderbolt cable to the Echo module to prevent accidental disconnects. This clip is compatible with Sonnet Thunderbolt cables.

To attach the clip to the cable, remove both items from their packaging, and then insert the connector into the connector clip as shown (Figure 4). Note that the connector will pass all the way through the clip; when you connect the cable to the chassis, the clip will secure the connector.

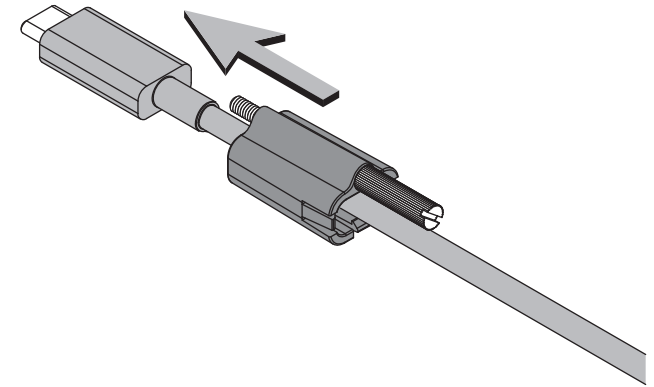


Figure 4

13. Connect the included (or other certified) Thunderbolt cable between a Thunderbolt port on the Echo module and a Thunderbolt port on your computer, or other Thunderbolt device in the chain connected to the computer (Figure 5). Note that cables or computer ports marked with a generic USB icon (🔌) or USB Charging Port icon (⚡) are NOT compatible. Secure the retainer clip to the module if you attached it. If you are daisy chaining additional Thunderbolt devices, connect another Thunderbolt cable between the downstream device and the open Thunderbolt port on the Echo module.
14. Connect interface cables between devices, PCIe cards, and computer as necessary.
15. Connect the included power cord between a wall outlet or power strip and the Echo module's power socket. Note that the module's power indicator will not light until the computer and any other Thunderbolt device connected between it and the module is powered on.

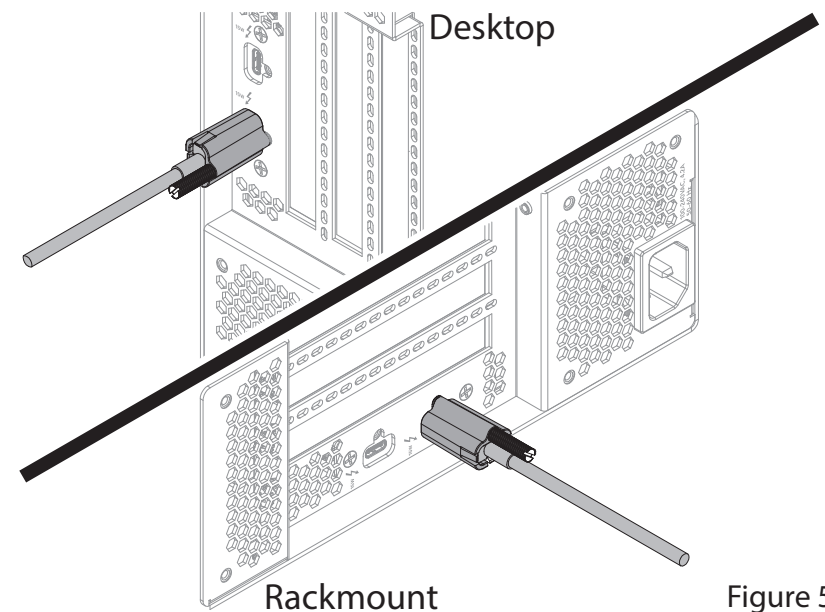


Figure 5

Chapter 4 – Complete Setup and Configuration

SETUP AND CONFIGURATION STEPS—MAC USERS

A – Confirm Echo III Module is Recognized

1. With the Echo module powered and connected to the computer, turn on the computer; any other Thunderbolt devices connected between the module and your computer must also be powered for you to perform the following steps.
2. Press and hold down the Option key, and then from the Apple menu, select System Information; a *System Information* window will open.
3. In the *System Information* window, click Thunderbolt... under the Hardware header in the left column. In the top right column under the Thunderbolt... Device Tree header, you will see Thunderbolt Bus, and then “DuoModo Echo III Module”.



Support Note: If “DuoModo Echo III Module” is not listed, disconnect and reconnect the Thunderbolt cable between the computer and Echo module. Note that it is not necessary to shut down the computer before disconnecting and reconnecting the cable.

B – Confirm the Installed Cards are Recognized

1. In the *System Information* window click PCI under the Hardware header in the left column.
2. At the top of the right column, installed cards are listed (if not, you may need to install drivers before the cards are recognized). Click one of the cards; you should see “Yes” next to Driver Installed and Tunnel Compatible, otherwise the card or driver may not be Thunderbolt-compatible.



Support Note: While Echo III Module doesn’t require drivers beyond those pre-installed in your computer’s OS, installed cards require Thunderbolt-compatible drivers to enable their use.

C – Install Card Drivers (If Necessary)

1. Launch a web browser, and then go to your card manufacturer’s website. Download and install the latest drivers according to the manufacturer’s directions.
2. Restart your computer; your Echo module is ready to use!

SETUP AND CONFIGURATION STEPS—WINDOWS USERS

A – Confirm the Echo Module and Installed Cards Are Recognized

1. With the Echo module connected to a power source and to the computer, turn on the computer. Note that if there are any other Thunderbolt devices connected between the Sonnet chassis and your computer, they must also be powered for you to perform the following steps.
2. When the computer boots for the first time after you connected the Echo module, an *Approve New Thunderbolt™ Devices* window appears. From the drop-down menu select Always Connect, and then click OK.
3. Right-click the Windows Start button, and then select Manage; the *Computer Management* window appears.
4. In the *Computer Management* window, click the category each card type you installed to expand the listing; a generic adapter listing will appear. After their drivers are installed, the listings will change to display the names of the installed cards.

B – Install Card Drivers (If Necessary)

1. Launch a web browser, and then go to your card manufacturer’s website. Download and install the latest drivers according to the manufacturer’s directions.
2. Restart your computer; your Echo module is ready to use!

Chapter 5 – Tips, General Information, and Known Issues

TIPS, GENERAL INFORMATION

Keeping the Cards Cool

With its optimized airflow design and temperature-controlled fans providing cooling at all times, Echo III Module provides adequate cooling for the installed cards. *Do not operate the Echo module outside of its enclosure, and do not block any of the vents!* Otherwise, the installed cards and Echo module's components may overheat.

Hot Plugging the Echo Module

When certified Thunderbolt-compatible cards (used with Thunderbolt-compatible drivers) are installed, you may connect and disconnect the module while the computer is on. Of course, if you have anything connected to the cards, such as storage devices, cameras, etc., follow proper procedures for disconnecting those devices before unplugging the module.

There's No Need to Unplug the Power Cable

Because Echo III Module automatically powers on and off with the computer to which it's connected, there's no power switch, nor is there any need to disconnect the power cable under normal use.

Power Indicator LED Operation

The module automatically powers on and off with the computer to which it's connected, and its power indicator only lights when the computer is on and turns off when the computer is sleeping or powered off.

Connecting Additional Thunderbolt Peripherals

The Echo module includes two Thunderbolt ports; the first is reserved for connection to your computer, while the second supports daisy-chaining of up to five additional Thunderbolt peripheral devices.

Using Expansion Cards Without Installing Drivers

Some Thunderbolt-compatible expansion cards, like Sonnet's Allegro™ Pro USB 3.2 PCIe cards, use inbox (built into the operating system) drivers, and are ready to use out of the box.

Replacing a PCIe Card After Initial Installation

Shut down the computer, and then disconnect the power adapter and Thunderbolt cables from Echo III Module before opening the chassis and replacing the card; **PCIe cards are not hot-pluggable!**

Echo III Module Provides Upstream Power

The Echo module can provide up to 15 watts to bus-powered Thunderbolt peripheral devices, enabling them to operate without connecting an additional power adapter.

Using the Echo Module to Charge Your Portable Computer

MacBook Air and MacBook Pro computers with Thunderbolt 5, 4, or 3 ports, and all PC laptops with Thunderbolt 5 or 4 ports may be charged *slowly* via Echo module's Thunderbolt ports (via 15W Power Delivery).

Not All Mac-Compatible Cards Work With M Series Macs

While this product is compatible with all M series Mac computers, not all PCIe cards that work with Intel-based Macs have M series-compatible drivers. We recommend that you contact your PCIe card's manufacturer to verify that the existing drivers support M series Macs.

KNOWN ISSUES

Not all PCIe Cards Will Perform at 100%

Thunderbolt PCIe bandwidth is limited to 2,880 MB/s. While most cards will operate at full performance, some may not because they require more bandwidth than Thunderbolt can provide.

Not All Thunderbolt Cables Deliver Full Performance

Full performance from the Echo module requires the use of the included (or other certified) Thunderbolt cable.

Operating System (OS) Updates May Break Compatibility

Specific device drivers that work under one OS version may not work under a later version. Before updating your computer to the latest OS, we recommend that you contact your PCIe card's manufacturer to verify that the existing drivers work. Note that other computer software updates may also break compatibility.

Some Devices' Performance May be Affected by Where They Are Connected in a Thunderbolt Chain

However small, Thunderbolt introduces latency to a device chain. If you expand with additional Thunderbolt expansion chassis, you may need to experiment with which cards work better in chassis closer to or farther from the computer in the chain.

Chapter 6 – Precautions, FCC Compliance, and Support Information

SAFETY PRECAUTIONS

Please read this section carefully before proceeding. These precautions explain the correct and safe use of this device, thereby helping to prevent injury to you or others, and also help you to minimize the risk of damaging the device.

- Do not attempt to modify the enclosure. If this device appears to be malfunctioning, contact your reseller or local distributor.
- Do not drop the module; dropping or mishandling module may result in a malfunction leaving the product inoperable.
- Do not insert your fingers or foreign objects inside the slot(s).
- Do not expose the device to rain, use it near water or containers that contain liquids which might spill into any openings, or in damp or wet conditions.
- If unusual smells, sounds, or smoke come from the device, or if liquids enter it, unplug it from the electrical outlet immediately.
- Follow the instructions here carefully; contact your reseller or local distributor for additional advice not covered in this User's Guide.

FCC Compliance

Echo III Module complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: This device may not cause harmful interference, AND this device must accept any interference received, including interference that may cause undesired operation.

Contacting Customer Service

Before contacting Customer Service, please check the Sonnet Web site (www.sonnettech.com) for the latest updates and files. When you contact Customer Service, please have the following information available:

- Product name
- Computer model
- PCIe card models
- A System Report (macOS) or a Microsoft System Information MSINFO32 (Windows) report (Windows), along with a description of the issue(s) you are encountering with your device

If further assistance is needed, contact **Sonnet Customer Service** at:

E-mail: support@sonnettech.com

Japan Customers

Contact Sonnet Customer Service Japan at:

E-mail: jp.support@sonnettech.com